



## Kingpin: Wheel Tree

While we manufacture our products to a very high standard, we can't guarantee any stand that isn't assembled correctly or used incorrectly. Please be sure that you understand the instructions and if not contact PSR for advice before use. PSR will not be held responsible in the instance of an incorrectly assembled stand. When using this service stand be sure the motorcycle and exhaust system are completely cool and the motorcycle is on a level and hard surface!

### Assembly Instruction:

- Illustration\_1

#1 Main Frame

Wheel Rod----->

Illustration\_2

#2 Main Frame x 2

Illustration\_3

Nut & Bolt

Quick Release Pin

Quick Release Pin (closed position)

Quick Release Pin (Open position)

#2 Main Frame
1. Assemble wheels & wheel rod to #1 Main Frame. 2. Assemble Two #2 Main Frame 3. Assemble #2 Main Frame to the **BOTTOM** of #1 Main Frame as above
- Illustration\_4

Quick Release Pin (closed position)

Quick Release Pin (Open position)

Nut & Bolt

Quick Release Pin

Illustration\_5

Bump Stops

Wheel Rod

Illustration\_6
4. Assemble #2 Main Frame to **TOP** of #1 Main Frame. 5. Assemble Wheel Rods and Bump Stops as above. 6. Open Bottom, then open Top Main Frame.

**Check out other great products by PSR:** Adjustable Rearsets, CNC engine case covers, engine case armors, racing chain adjusters, digital tire warmers, Click 'N Roll race levers, remote brake adjusters, Powerchock, PowerPlatform, Kingpin - Wheel Tree, PowerJack stands & More!

**Warranty:** PSR products are intended for closed course competition purposes only, and therefore are sold "as is" WITHOUT warranty. PSR specifically disclaims any warranties of merchantability or fitness for a particular purpose and disclaims all responsibility for consequential and incidental damages or any other losses arising from the use of these products or parts. Rubberized parts wearing out & scrapes on the bottom of the stand are part of normal wear and tear.