




PSR Frame Slider Installation Ninja EX250R 08-12

1. Remove fairing from left hand side.
2. Remove fairing from right hand side.
3. Remove factory engine mount stud and replace with PSR stud.

Warning! As you are removing the factory stud, insert the PSR stud from the opposite side. This will keep the engine in place.



4. Install left side bracket. DO NOT tighten nut until right had bracket is installed.

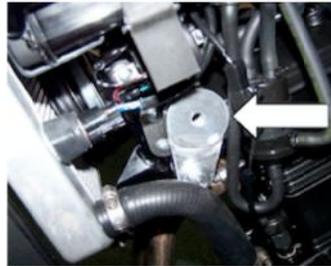

5. Install right side bracket. Tighten nut on left and right side to factory spec.

6. Re-install the fairing



Professional installation is recommended. Always use proper safety measures during the install of this product. Do not try to install this product without proper tools, recently calibrated torque wrench, correct torque specifications from factory service manual, safety goggles and gloves. The motorcycle must be in a fixed secure position before the install process begins. DO NOT remove both engine studs at the same time. PSR frame sliders are meant to help possibly minimize the damages in the event of a crash. PSR do not guarantee the frame sliders will protect your motorcycle from any extent of damage when the bike is dropped or crashed. Customers shall not assume no damages will happen when the frame sliders are installed. PSR is not responsible for any part of your motorcycle for any reason. Precisely measure location of cut and if in doubt at any point please call us before the install process has begun.