



ZX10R 08-10 No Cut Frame Sliders
04-00913-02/04-00913-41

Frame Slider Instructions


Right Side:

1. Remove right side bolt. Mount right side puck with M10 x 1.25 x 50 to OEM torque specifications.



Left Side:

1. Removed the black side panel
2. Mount the bracket on the screw marked on the picture using M10 x1.25 x40.

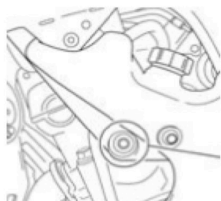

3. Install the bodywork back.
4. Used blue loc tie to install the left side on the bracket with M10 x 1.50 x70

Professional installation is recommended. Always use proper safety measures during the install of this product. Do not try to install this product without proper tools, recently calibrated torque wrench, correct torque specifications from factory service manual, safety goggles and gloves. The motorcycle must be in a fixed secure position before the install process begins. DO NOT remove both engine studs at the same time. PSR frame sliders are meant to help possibly minimize the damages in the event of a crash. PSR do not guarantee the frame sliders will protect your motorcycle from any extent of damage when the bike is dropped or crashed. Customers shall not assume no damages will happen when the frame sliders are installed. PSR is not responsible for any part of your motorcycle for any reason. Precisely measure location of cut and if in doubt at any point please call us before the install process has begun.